



Note:

Installation should be in accordance with accepted plumbing practices. Flush all pipes thoroughly before installation. Installation and field adjustment are the responsibility of the installer.

INSTALLATION

1. Close both hot and cold water shutoff valves upstream of the tempering valve.
2. Bleed pressure from the system.
3. Route copper tubing or piping to fit valve dimensions.
4. Remove tailpieces from the valve and make sure union nuts are over the tubing/piping before connecting to the tailpiece.

NOTE: If soldering, remove unions and gaskets from valve body prior to soldering to prevent damage to valve from excessive heat.

5. Flush piping again, install valve using filter gasket on hot and cold water inlets and fiber gasket on mixed water outlet.
6. Turn on the cold and hot water. If any leak are observed, tighten connections as necessary to stop leak before proceeding.

TO ADJUST TEMPERATURE (FIGURE 4)


LM490 is factory pre-set to 120° F (49° C) and LM490-10 is factory set to 90° F (31° C) outlet temperatures under the following conditions:

- Cold inlet: 60° - 70° F (16 - 21° C)
- Hot inlet: 140° - 145° F (60 - 63° C)
- Supply Pressures: 45 psi (310 kPa)

1. Let the water flow for at least two minutes to allow supply temperature to stabilize.
2. Place a thermometer in the outlet water stream.
3. Loosen handle screw with hex wrench.
4. Handle must be lifted 1/4" to adjust temperature. Rotate handle clockwise to decrease temperature and counter-clockwise to increase the temperature.
5. Lower handle and tighten screw.
6. Check for outlet temperature.

CAUTION: NEED PERIODIC INSPECTION

This valve requires periodic inspection and verification of outlet temperature by a licensed contractor. Corrosive water conditions, inlet temperatures over 200° F (93° C), unauthorized adjustments or repair could render the valve ineffective for service intended. Regular cleaning and checking of thermostat assembly helps to assure maximum life and proper product function. Frequency of cleaning depends upon local water conditions.

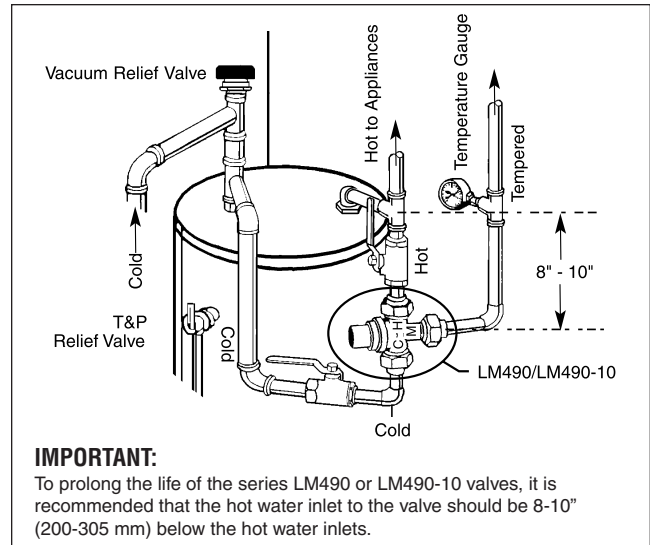

IMPORTANT:

To prolong the life of the series LM490 or LM490-10 valves, it is recommended that the hot water inlet to the valve should be 8-10" (200-305 mm) below the hot water inlets.

Figure 1. Domestic Hot Water Application.

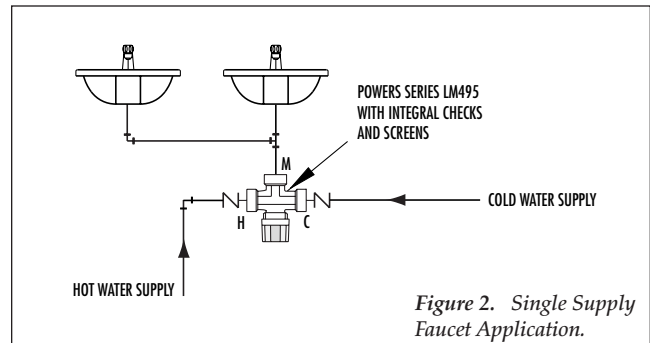


Figure 2. Single Supply Faucet Application.


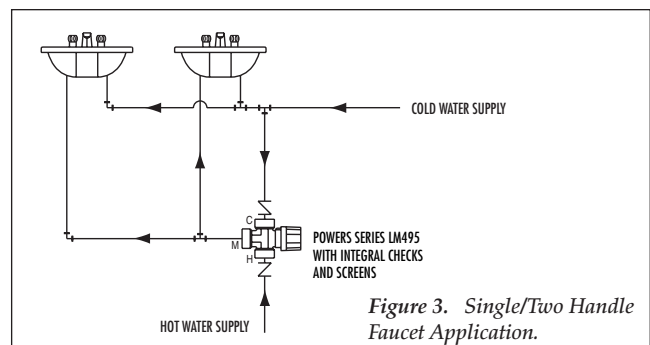


Figure 3. Single/Two Handle Faucet Application.

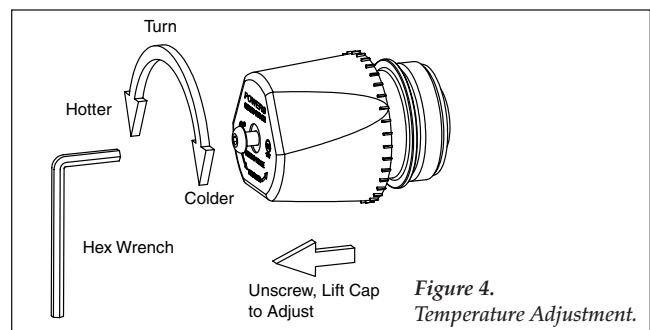

SPECIFICATIONS

Temperature Adjustment:

Series LM490 90° - 160° F (32° to 71° C)
 Series LM490-10 60° - 120° F (16° to 49° C)

Union Connections:

Series LM490
 Series LM490-10

Female NPT			Sweat			CPVC			PEX		
1/2"	3/4"	1"	1/2"	3/4"	1"	1/2"	3/4"	1"	1/2"	3/4"	1"
LM490-1	LM491-1	LM492-1	LM490-2	LM491-2	LM492-2	LM490-3	LM491-3	LM492-3	LM490-4	LM491-4	LM492-4
LM490-101	LM491-101	LM492-101	LM490-102	LM491-102	LM492-102	LM490-103	LM491-103	LM492-103	LM490-104	LM491-104	LM492-104

Capacity:

PRESSURE DROP ACROSS THE VALVE

(CV) 1 psi (7 kPa)	5 psi (34 kPa)	10 psi (69 kPa)	15 psi (103 kPa)	20 psi (138 kPa)	30 psi (207 kPa)	45 psi (310 kPa)	60 psi (414 kPa)
3.42	7.6 gpm (29.0 lpm)	11.0 gpm (42.0 lpm)	13.0 gpm (49.0 lpm)	15.0 gpm (57.0 lpm)	19.0 gpm (72.0 lpm)	23.0 gpm (87.0 lpm)	27.0 gpm (102.0 lpm)

Approach Temperature: 10°F (5.6°C) above set point
Max. Operating Pressure: 150 psi (1034 kPa)
Max. Hot Water Temperature: 200°F (93°C)
Minimum Flow: 0.5 gpm (1.90 lpm) when tested in accordance with ASSE 1017-2003
Check Valves: Integral
Construction: Cast Brass Body
Approval: CSA B125 Certified
Listing: ASSE 1017



WARNING:

For valves with CPVC or PEX-end connections, do not exceed the tubing manufacturers pressure and temperature ratings. Refer to the tubing manufacturers product specifications for that information.

Warning:

Powers Hot Water Temperature Control Valve Series LM490 & LM490-10 are designed to be installed at or near the boiler or water heater. They cannot be used by themselves for tempering water temperatures at fixtures where ASSE Standard 1016 or ASSE Standard 1070 listed devices are required. To comply with ASSE Standard 1016 or ASSE Standard 1070, listed devices such as Powers Series e480 or LM495 should be used at fixtures to prevent possible injury. Powers Hot Water Temperature Control Valve Series LM490 or LM490-10 are not designed to compensate for system pressure fluctuations. Such use may result in severe bodily injury (i.e., scalding or chilling) and/or death. When installing the Series LM490 or LM490-10 valves in radiant heat applications, the components of the radiant heat system must be of materials with a construction capable of withstanding the high limit output temperatures of the heating boiler. If you are uncertain as to the product's adaptability for your application, please consult an authorized representative before installing or using the product.

TROUBLESHOOTING

Fluctuating or erratic hot water temperature at fixture:

Unbalanced Pressure. Install balancing or throttling valve at the hot and cold water supplies and adjust accordingly for demand.

Hot water backing up into cold water line:

Hot water pressure is higher than cold water pressure. Examine check valves for dirt & debris, clean as necessary.

Cannot adjust water temperature to desire temperature:

Install balancing or throttling valve at the hot and cold water supplies and adjust accordingly for demand.

High pressure drop through the tempering valve:

Valve Undersized. Install larger thermostatic tempering valve.

Insufficient hot water during peak demand:

Check flow requirement during peak demand period. Use larger thermostatic tempering valve.

CALIFORNIA PROPOSITION 65 WARNING

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. (California law requires this warning to be given to customers in the State of California.) For more information: www.wattsind.com/prop65

REPAIR KIT	Part #	Part #
Parts Description	LM490	LM490-10
Plunger/Motor Assembly	490-090	490-190

ATTENTION INSTALLER:

After installation, please leave this Instruction Sheet for occupant's information. **IMPORTANT:** Inquire with governing authorities for local installation requirements.



© June 2005, Powers, a division of Watts Water Technologies, Inc.
 USA Phone: 1.800.669.5430 • Fax 1.847.824.0627
 Canada Phone: 1.888.208.8927 • Fax 1.888.882.1979
www.powerscontrols.com